

# Hornet Maxx 1 Alarm Error Codes

The Hornet Maxx 1 will flash the indicator LED to show which zone last set off the alarm. An intrusion alert is confirmed by three chirps of the siren when the vehicle is disarmed and the ignition turned on. The flash cycle is repeated two more times giving three in total.

<b>Hornet Maxx 1 Alarm Error Codes</b>	
<b>LED</b>	<b>Zone</b>
Three Flashes	Optional Sensor 2
Four Flashes	Door Trigger
Five Flashes	Boot / Bonnet Trigger
Six Flashes	Closed Circuit Trigger
Seven Flashes	Ultrasonic Sensor
Eight Flashes	Ignition Trigger

Chirps and flashes in most instances indicate correct operation of the system, however extra chirps or flashes can indicate a door is ajar, or a sensor has been bypassed.

<b>Interpreting Chirps and Flashes for the Hornet Maxx1</b>	
<b>No of Chirps and Flashes</b>	<b>Explanation</b>
1 chirp, 1 flash	Disarming of the alarm
2 chirps, 2 flashes	Arming the alarm
3 chirps, 3 flashes	Disarmed and there was an intrusion attempt
2 chirps, 2 flashes then 3 more chirps and flashes	Armed however a door is ajar
2 chirps, 2 flashes then 4 more chirps and flashes	Armed however there is a input sensor not working properly
2 chirps, 2 flashes then 5 more chirps and flashes	Armed however either boot, bonnet or closed circuit trigger is not working properly

*Page last updated October 2011*

© DragonCarAudio.co.uk - Permission given for forums and forum posts to link to this page.