



# Bluetooth Car Kits: How to Pair a Nokia E72 Mobile Cell Phone to an Mki9100 Parrot Car Kit




Menu > Ctrl. panel > Connectivity > Bluetooth

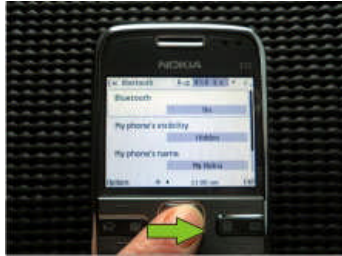


Scroll Right on Navi button for 'Paired devices' tab  
> Options > New paired device > More devices

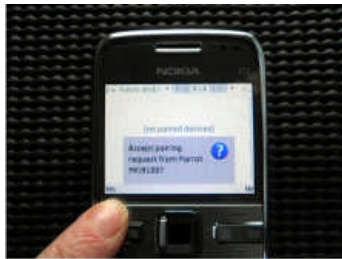

Click on car kit > Click 'Yes' to accept pairing request > enter Mki9100 default code '0000'

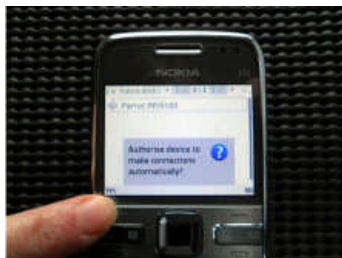

For automatic connection each time, click 'Yes' to 'Authorise device to make connections automatically'

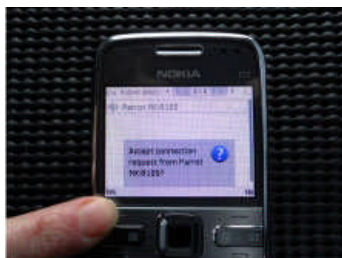

To synchronise address book, click 'Yes' to 'Accept connection request from Parrot Mki9100'

Read full article:

[www.DragonCarAudio.co.uk/bluetooth-car-kits-pairing.html](http://www.DragonCarAudio.co.uk/bluetooth-car-kits-pairing.html)